


Getting Started with the M308 Wired Ethernet Monitor

M308/M309

Wiring Diagram (side view of enclosure)

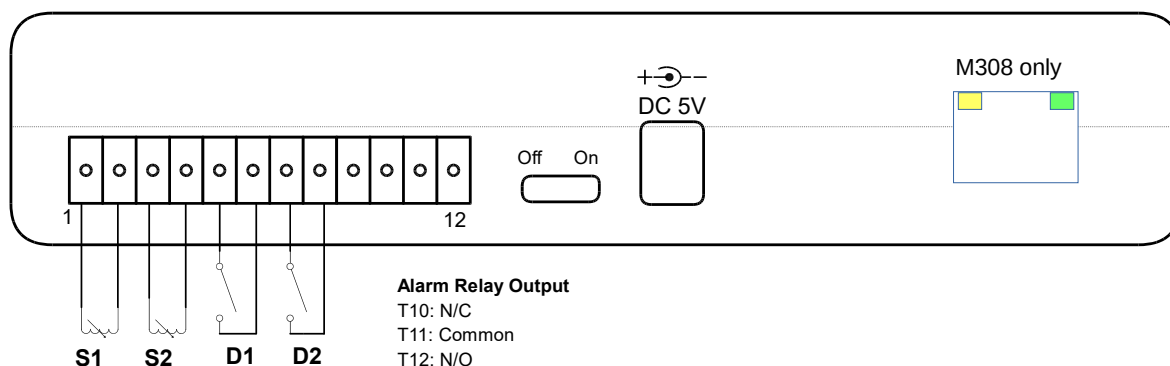


Installation

Install the batteries into the unit if necessary. Test by turning on without the AC adapter.

Mount the M308 in a location convenient to power and the environment to be monitored. Connect temperature and door sensors as needed (see diagrams below)

Sensor wiring examples:

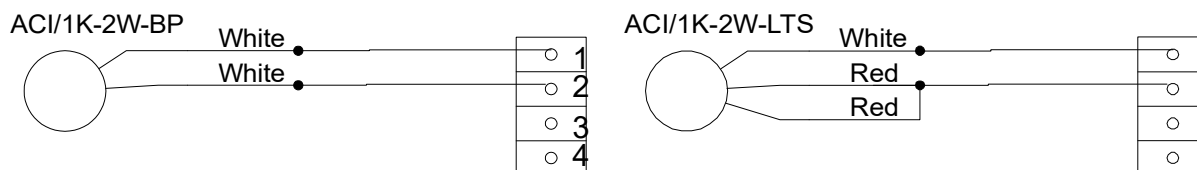

Download and install the Data Capture software

1. Download and install the latest version of Data Capture from <http://www.temperatureguard.com/software>

Battery Installation

Remove the four cover screws and install batteries if not already installed. Positive to the left. Batteries should be replaced about every 5 years. Use AA NiMH rechargeable batteries only.



Reset to DHCP/Defaults

Unplug the unit while it is on. Hold down the Reset Defaults switch, while plugging it back in. As soon as the LED1 comes on release the Reset_Defaults switch immediately. Unit will now be in DHCP mode. This actually resets the network adapter to defaults. If the LED1 keeps blinking instead of going solid on, reboot with the power switch.