


Getting Started with the M308 (Wired) or M309 (Wireless) Ethernet Monitor

The M309 can operate in wireless Ethernet 802.11 b/g/n 2.4GHz only. Another wireless device, such as a smart phone, laptop, or tablet is required to get it on your wireless network. The M308 is wired Ethernet

M308/M309

Wiring Diagram (side view of enclosure)

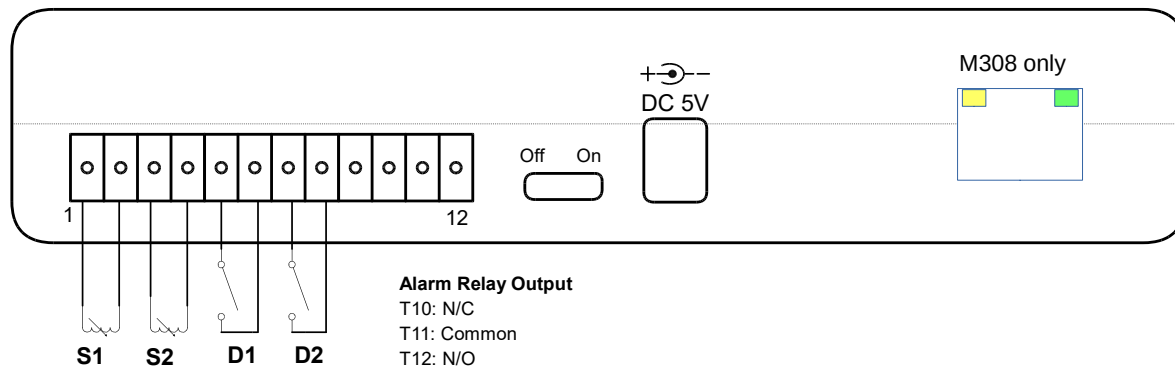


Installation

Install the batteries into the unit. See picture below.

Mount the M308/M309 in a location convenient to power and the environment to be monitored. Connect temperature and door sensors as needed (see diagrams below)

Sensor wiring examples:

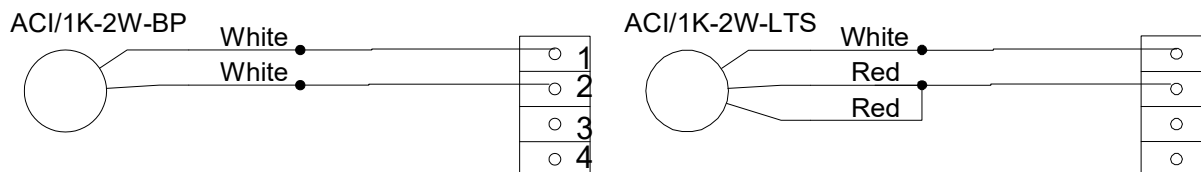

Download and install the Data Capture software

1. Download and install the latest version of Data Capture from <http://www.temperatureguard.com/software.html>
2. Wireless Setup Manual (M309 only) http://www.temperatureguard.com/Documentation/Manuals/M309_WiFi_Setup.pdf

Battery Installation

Remove the four cover screws and install batteries. Positive to the left.

